



castlesales.com


Thank you for choosing and using our HD Smart Bluetooth® Glasses! To help you quickly become proficient in operating this device, we have included a comprehensive user manual. Before you begin using your product, please take the time to carefully read through this manual to ensure that you can make the most of your product.

⚠ WARNING/CAUTION

- Do not use Bluetooth® smart glasses at high volume for an extended period.
 - To prevent hearing damage, please use Bluetooth® smart glasses at a comfortable and moderate volume
 - Start by lowering the device volume before putting on your Bluetooth® smart glasses or placing them near your ears
 - Then gradually increase the volume until you reach a comfortable listening level
- Please exercise caution and adhere to laws regarding mobile phone use while driving.
- If you are using Bluetooth® smart glasses for activities that require concentration, such as cycling or walking on or near roads, construction sites, or railways, take care of your safety and that of others. You should remove your Bluetooth® smart glasses or adjust the volume to ensure you can hear surrounding sounds, including alarms and warning signals. If your Bluetooth® smart glasses emit abnormal noise, do not use them. In such cases, please turn off your Bluetooth® smart glasses and contact customer service.
- Do not submerge smart Bluetooth® smart glasses in water or expose them to a humid environment for an extended period.
- Do not wear them during water sports such as swimming, wakeboarding, and surfing.
- Do not feel heat or cannot hear any sound, remove your Bluetooth® smart glasses immediately.
- This product contains small parts that may pose a choking hazard. Not suitable for children under 3 years.
- This product contains magnetic materials. Consult your doctor regarding its potential impact on implantable medical devices.
- To reduce the risk of fire or electric shock, do not expose this product to water or moisture.
- This product must not be exposed to splashing or spraying with liquids, and objects containing liquids (such as vases, etc.) must not be placed on or near this product.
- Please place this product away from open flames or heat sources.
- Do not place open flames (such as lit candles) on or near this product.
- Unauthorized modifications to this product are prohibited.
- Do not overheat products containing batteries (for example, please avoid direct sunlight and keep away from sources of ignition, etc).
- After each use, clean both sides and parts of the lenses of the glasses with the included cloth bag or dry cloth.

A) PRODUCT IMAGE AND FEATURES

1 color: White

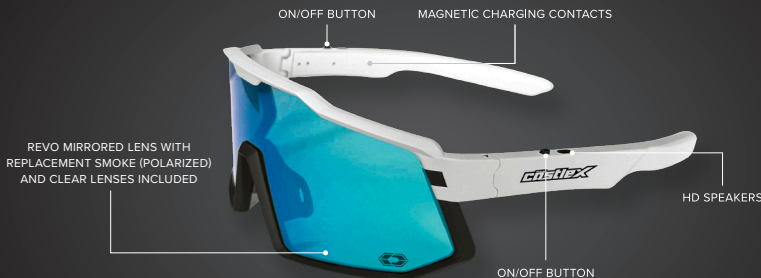

castlesales.com

B) SWITCHING BETWEEN LANGUAGES

After powering on, press the buttons on both temple arms and without connecting to a mobile device, quickly press the right temple arm button three times to prompt the user to switch between Chinese and English languages.

C) PRODUCT FUNCTION INDICATOR CODE

POWER ON	Solid blue light for 2 seconds, then flashing red and blue lights for 0.5 seconds
POWER OFF	Solid red light for 2 seconds
WAITING TO CONNECT	Flashing red and blue lights for 0.5 seconds on main terminal
CONNECTION SUCCESSFUL	No light
PLAY	No light
PAUSE	No light
INCOMING CALL	Flashing blue light 3 times/second on main and secondary terminals
CALL	Flashing blue light 3 times/second on main and secondary terminals
LOW BATTERY	Flashing red light 3 times/second
CHARGING	Solid red light
FULLY CHARGED	No light

D) BLUETOOTH® TECHNICAL SPECIFICATIONS

- Bluetooth® 5.4 version
- HD two-channel stereo sound quality, frequency 2.4 GHz
- Maximum transmission range 10m
- 7 hours of continuous talk time
- Audio decoding rate 15 Bit
- Signal-to-noise ratio > 60 dB
- 10 days of normal standby time
- Operating temperature -14°F to 131°F
- Charging current 60mA
- 3.4V low power, 3.2V shutdown

Product name: CONNEKT 2 Smart Bluetooth® Glasses
Product model: CONNEKT 2
Frame material: TR90
Lens material: PC
Frame color: White
Product net weight: 40-44g
Bluetooth protocol: V5.4
Product size: 60x150x180mm
Battery capacity: 95mAh
Charging time: 2 hours

E) INSTRUCTIONS FOR USE OF THE PRODUCT

- When storing the glasses, stack the temple arms in an overlapping manner, with the left arm inside and the right arm outside. Ensure that the lenses' front surface does not make contact with the ground to prevent scratching.
- If the product gets contaminated with dust, sweat, grease, or other stains, please clean it first with clean water (for the lenses) or specialized eyeglass cleaner. Then, gently wipe it with a dedicated eyewear cloth to prevent lens abrasion.
- Store the product in a cool, shaded, and dry place. It is recommended to keep it at a room temperature ranging from 32°F to 113°C.
- Avoid leaving the product exposed to direct sunlight for extended periods.
- Do not expose the product to environments with temperatures below 32°F or above 113°C for extended periods to prevent frame deformation.
- Smart Bluetooth® glasses are advanced technological products. Please store them properly when not in use.

F) ELECTRICAL CONTROL INSTRUCTIONS

- Power On: To power on the device, press and hold the power button on both temple arms of the device, which are in the off state, for 2 seconds. The blue light will stay on for 2 seconds, accompanied by the prompt "Power On." Afterward, the red and blue lights will flash alternately, indicating that the device is now turned on
- Power Off: In Bluetooth® standby mode, press and hold the power button for 3 seconds. The red light will stay on for 2 seconds, accompanied by the prompt "Power Off." Then, the lights will go off, indicating that the device has been powered off.

G) BLUETOOTH® PAIRING

- To pair via Bluetooth®, ensure the machine is in the off state. Press and hold both the left and right buttons for approximately 2 seconds. Bluetooth® will automatically pair, and when only the red and blue indicator lights are flashing, with the indicator light on the other end turned off, it signifies that Bluetooth® pairing is complete.
- In pairing mode, initiate a device search on your Bluetooth® enabled device. Once you find a device named "CONNEKT", manually connect to it. Upon successful pairing, you will hear a voice prompt saying "connected," and the indicator light on the host side will turn off. At this point, the device will automatically enter standby mode.
- ANSWER AND END CALLS
When an incoming call comes in, press the power button briefly to answer the call. During the call, press and hold the power button for about 2 seconds to end the call.
- REJECT CALLS
When a call comes in, press and hold the switch key for about 2 seconds to reject the call.
- Activate Phone Voice Functions (e.g., Siri, Google Voice)
Voice Assistant: In standby mode, double-tap to access the Siri or Google Voice function.

H) FUNCTIONS OF SMART BLUETOOTH® GLASSES

- In a Bluetooth® connection, when listening to MP3 music, if a call comes in, the MP3 playback will automatically pause. Press the ON button to answer the call. After the call is over, press the ON button once to resume MP3 playback.
- To charge the device, simply plug the USB cable into a computer's USB port or a power adapter (it is recommended to turn off the device before charging)
- During the charging process, a solid red light will indicate charging and the light will turn off after the battery is fully charged.
- After the device is fully charged, promptly disconnect it from the charging cable to avoid any short circuits in the cable.
- If the device is not used for an extended period, remember to charge it once every three months.
- Do not wear Bluetooth® glasses while they are charging.
- Avoid exposure to strong electromagnetic waves, as they may cause product malfunctions.

I) PRODUCT PACKAGING ACCESSORIES

- 1 pair of Smart Bluetooth® Glasses with revo mirrored lens
- 2 additional lenses (smoke + clear)
- 1 travel case
- 1 charging cable
- 1 cleaning cloth
- 1 pair of glasses holders
- 1 pair of sound amplifiers
- 1 pair of ear grips
- 1 instruction manual

MADE IN CHINA



castlesales.com